

UNIPART  **BL**
Parts

TRIUMPH
TR8 NAS

Part No.
RTC9825FK

Feb 1982

UNIPART,
Unipart House,
Cowley
Oxford. OX4 2PG


Telephone: 0865 778966
Telex: 83331
Cables: UNIPART Oxford

PARTS CATALOGUE

Whilst every effort is made to ensure the accuracy of the particulars contained in this Manual the Manufacturing Companies will not, in any circumstances, be held liable for any inaccuracies or the consequences thereof.

© B L Cars Limited 1982

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic mechanical, photocopying, recording or other means without prior written permission of B L Cars Limited.

UNIPART  **BL** Unipart parts and accessories are tested and approved by B L Cars
Parts For full details of the Unipart range refer to the Unipart catalogue.

INTRODUCTION

INDEXES

The catalogue features a series of indexes for easy reference.

1. Pictorial Index -- This index consists of small illustrations, each highlighting a group of components. Against each group the commencing and finishing page numbers on which the items appear are given.
2. Alphabetical Index -- This index lists all the major items of the vehicle in alphabetical sequence and provides the page number on which the item can be found.
3. Numerical Index -- This index which is at the end of the catalogue lists all serviced parts in numeric sequence, together with a full description of the part and the first page number on which the item appears.

LAYOUT

The catalogue illustrates all parts, assemblies and repair kits available for the vehicle and quotes the part number directly on the illustration page. The quantity for any part number is always one off unless a higher quantity is shown in brackets against the part number. Where a component is not part numbered individually it is not available as a separate item. In such cases the assembly or kit must be fitted to the vehicle. Part numbers quoted on illustrations are common to all models covered by the publication unless otherwise stated against the heading, the part number, or in the section at the bottom of the illustration. Where two part numbers are shown against an item, the second number being in brackets, this indicates a supersession exists and the number in brackets is the earlier number.

Users should familiarize themselves with the various standard symbols and abbreviations that are used throughout the catalogue, together with the country abbreviations that are used to denote parts fitted to a specific market.

ORDERING

When ordering replacement parts it is essential that the following points are noted.

1. Always quote the complete part number including all prefix and suffix letters or numbers.
2. Always quote the quantity required, noting that the quantities shown are those used in the application actually illustrated. Sometimes only minimum packaged quantities are available and these may well contain more parts than are actually required for a single job. For details of packaged quantities refer to the parts price list.
3. Where a change point is shown for a vehicle, engine, gearbox or axle check carefully to ensure that the correct part number is ordered.
4. The listing or illustrating of an item does not guarantee its availability.

The policy of B L Cars Limited is one of continued development and improvement. Consequently they reserve the right to change specifications without prior notice.

1B02

INTRODUCTION

REPERTOIRES

Le catalogue comporte un certain nombre de répertoires en facilitant la consultation.

1. Répertoire illustré — Il consiste en de petites illustrations correspondant chacune à un groupe de pièces. Face au groupe on trouve les numéros des première et dernière page sur lesquelles figurent les pièces.
2. Répertoire alphabétique — Il donne des nomenclatures de toutes les pièces principales du véhicule, par ordre alphabétique, et le numéro de la page à laquelle on trouvera la pièce.
3. Répertoire numérique — Il se trouve en fin du catalogue et énumère toutes les pièces de rechange par ordre numérique et donne le numéro de la première page à laquelle la pièce figure.

DISPOSITION

Le catalogue représente toutes les pièces, ensembles ou pochettes de réparation qui se font pour le véhicule, chaque pièce comportant un numéro clé qui renvoie aux renseignements appropriés comme le numéro de la pièce, sa désignation, la quantité, qui se trouvent à la page à côté. Les désignations encadrées indiquent que la pièce fait partie de l'ensemble qui la précède immédiatement. Lorsqu'une pièce n'est pas vendue séparément il faut monter sur le véhicule l'ensemble ou kit. Les numéros de pièce indiqués sont communs à tous les modèles que concerne la publication sauf indication contraire figurant à l'en-tête ou dans la colonne réservée aux observations.

Il est demandé aux utilisateurs du catalogue de se familiariser avec les divers symboles et abréviations utilisés tout au long du catalogue, et aussi avec les abréviations des pays, pour les pièces destinées à un marché particulier.

COMMANDES

Pour commander des pièces de rechange il est essentiel de se conformer aux règles suivantes:

1. Toujours indiquer le numéro de la pièce tout entier, y compris toutes lettres ou chiffres, préfixes ou suffixes.
2. Toujours indiquer la quantité requise, ne pas oublier que les quantités indiquées sont celles requises pour l'utilisation qui est illustrée. Parfois les pièces sont conditionnées par quantités minimales et il est possible dans ce cas qu'il y ait plus de pièces que nécessaire pour une intervention particulière. On trouvera au barème des renseignements sur les pièces vendues par quantité.
3. Lorsqu'un changement est indiqué pour un véhicule, un moteur, une boîte de vitesses ou un essieu, vérifier soigneusement qu'on commande la pièce portant le bon numéro.
4. Le fait qu'une pièce figure à la nomenclature ne veut pas forcément dire qu'elle soit disponible.

BL Cars Limited a pour principe de procéder sans cesse à des développements et perfectionnements, et se réserve donc le droit d'apporter des changements aux caractéristiques sans préavis.

EINLEITUNG

INDEX-VERZEICHNISSE

In diesem Katalog sind eine Reihe von Index-Verzeichnissen zur leichten Bezugnahme vorgesehen.

1. Bildindex: Dieser Bildindex besteht aus einer Reihe von kleinen Abbildungen, die sich jeweils auf eine gewisse Bauteilgruppe beziehen. Zu jeder Gruppe gehören die Anfangs- und Endseitennummern, auf der die abgebildeten Teile zu finden sind.
2. Alphabetischer Index: Auf diesem Index erscheinen alle Hauptteile des Fahrzeugs in alphabetischer Reihenfolge und die Seitenzahl, auf der diese Bauteile zu finden sind.
3. Numerischer Index: Dieser Index am Ende der Katalogseiten zeigt alle Serviceteile in numerischer Reihenfolge und außerdem die erste Seitenzahl, auf der ein Teil erscheint.

AUSLEGUNG

Der Katalog zeigt alle Teile, Einheiten und Reparatursätze, die für das Fahrzeug erhältlich sind. Die Einzelteile sind mit Zahlen gekennzeichnet, die auf die relevante Information verweisen (z.B. Teilnummer, Beschreibung und Menge auf der nächsten Seite). Eingesetzte Beschreibungen weisen darauf hin, daß ein bestimmtes Teil zu der kompletten Einheit gehört, die direkt nachfolgt. Wenn ein Bauteil nicht separat erhältlich ist, muß eine komplette Einheit oder ein ganzer Bausatz in das Fahrzeug eingesetzt werden. Die angegebenen Teilnummern beziehen sich auf alle Modelle, für die diese Veröffentlichung gilt, wenn es nicht anders in der Überschrift oder unter Bemerkungen angegeben wurde.

Leser dieses Katalogs lernen am besten die verschiedenen Standardsymbole und Abkürzungen, die überall im Katalog verwendet werden, kennen. Außerdem sind die Länderabkürzungen nützlich, die für Teile eines bestimmten Marktes gelten.

BESTELLUNG

Bei der Bestellung von Ersatzteilen ist es erforderlich, die folgenden Punkte zu beachten:

1. Immer komplette Teilnummer mit Präfix- und Suffix-Buchstaben oder -Nummern angeben.
2. Niemals Mengenangabe vergessen. Es werden immer die Mengen abgebildet, die in der gezeigten Anwendung benötigt werden. Manchmal sind nur Mindestmengen erhältlich. Dabei kann es sich um zahlenmäßig größere Teile handeln, als sie für eine Arbeit erforderlich sind. Einzelheiten über abgepackte Mengen sind auf der Einzelteilpreislise zu finden.
3. Wenn für ein Fahrzeug, einen Motor, ein Getriebe oder eine Achse ein Änderungspunkt gezeigt wird, sorgfältig überprüfen, daß das korrekte Einzelteil mit der richtigen Nummer bestellt wird.
4. Eine Abbildung oder Aufführung eines bestimmten Bauteils ist keine Garantie für die Lieferfähigkeit des Artikels.

BL Cars Limited ist ständig damit beschäftigt, seine Produkte zu verbessern und weiterzuentwickeln. Änderungen ohne vorherige Mitteilung sind daher vorbehalten.

1B03

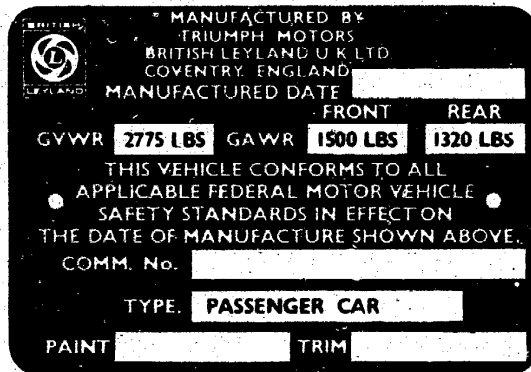 
GROUP A
EXTERIOR PAINT & TRIM COLOUR IDENTIFICATION CODE

Body Colour and Paint Code					
Ermine	CAA	Persian Aqua	JMW	Cavalry Blue	JCJ
Inca Yellow	FAB	Pendelical	NCE	Ermine	NME
Russet Brown	AAE	Carnelian	CDE	Monza	CMV
Brooklands Green	HAE	Midas	GCC	Champagne	LMK
Pageant Blue	JAG	Triton	HAG	Black	PMA
Leyland White	NAF	Black	PAG	Silverleaf	MME
Vermilion	CAE	Porcelain	NGG	Oporto	CMP
Turmeric	FCB	Aran Beige	NCC	Cashmere	GMD
Richelieu	CCE	Bordeaux Red	CKK	Zircon	JMJ
Poseidon	HAF	Pharaoh Gold	GCF	Moonraker	JNF
Platinum	MCA	Argent Silver	MCB		

Trim Colour and Trim Code					
Sebring White	NAC	Emerald	HAC	Navy Blue Check	RAH
Black	PAA	Red & Black	RAA	Golden Tan Check	RAG
Beige	AAA	Green & Black	RAB	Off White	NAE
Chestnut	AAD	Navy Blue	JAJ	Grey	LAG
Tartan Red	CAC	Golden Tan	AAM		

Colour of trim items are denoted by the Trim Code letters shown above. The first and third code letters only follow the part number.
EG. XYZ123JJ (Navy Blue)

Paints and trim colours recorded on Commission No/VIN Plate.




GRUPE A
CODE D'IDENTIFICATION DE COULEUR, PEINTURE EXTERIEURE & GARNITURE INTERIEURE

Couleur Carrosserie et Code peinture					
Carmine	CAA	Persian Aqua	JMW	Cavalry Blue	JCJ
Inca Yellow	FAB	Pendelical	NCE	Ermine	NME
Russet Brown	AAE	Carnelian	CDE	Monza	CMV
Brooklands Green	HAE	Midas	GCC	Champagne	LMK
Pageant Blue	JAG	Triton	HAG	Black	PMA
Leyland White	NAF	Black	PAG	Silverleaf	MME
Vermilion	CAE	Porcelain	NGG	Oporto	CMP
Turmeric	FCB	Aran Beige	NCC	Cashmere	GMD
Richelieu	CCE	Bordeaux Red	CKK	Zircon	JMJ
Poseidon	HAF	Pharaoh Gold	GCF	Moonraker	JNF
Platinum	MCA	Argent Silver	MCB		

Couleur de Garniture et Code Garniture					
Sebring White	NAC	Emerald	HAC	Navy Blue Check	RAH
Black	PAA	Red & Black	RAA	Golden Tan Check	RAG
Beige	AAA	Green & Black	RAB	Off White	NAE
Chestnut	AAD	Navy Blue	JAJ	Grey	LAG
Tartan Red	CAC	Golden Tan	AAM		

Les couleurs des garnitures interieures sont denotees par les lettres du Code Garniture indique ci-dessus. Seules la premiere et la troisieme lettres suivent le numero de reference de la piece.
EX. XYZ123JJ (Navy Blue)

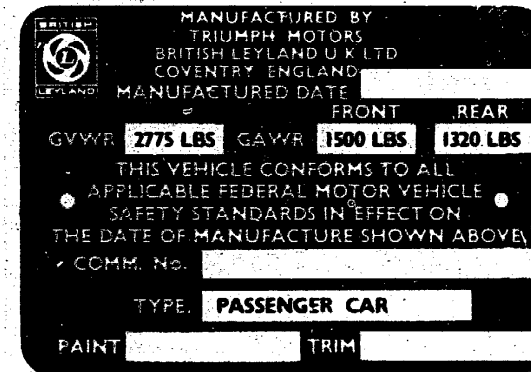 Les couleurs de la peinture et des garnitures sont inscrites sur la plaquette de No de commission/VIN.



1B04


GRUPPE A
FARBSCHELSEL DER KAROSSERIE - UND INNENAUSSTATTUNGSFARBEN

Karosseriefarbe und Farbcode					
Carmine	CAA	Persian Aqua	JMW	Cavalry Blue	JCJ
Inca Yellow	FAB	Pendelican	NCC	Ermine	NME
Russet Brown	AAE	Carnelian	CDE	Monza	CMV
Brooklands Green	HAE	Midas	GCC	Champagne	LMK
Pageant Blue	JAG	Triton	HAG	Black	PMA
Leyland white	NAF	Black	PAG	Silverleaf	MME
Vermilion	CAE	Porcelain	NCG	Oporto	OMP
Lumeric	FCB	Aran Beige	NCC	Cashmere	GMD
Ricnelieu	CCE	Bordeaux Red	CCK	Zircon	JMJ
Poseidon	HAF	Pharaoh Gold	GCF	Moonraker	JNF
Platinum	MCA	Argent Silver	MCB		

Innenausstattungsfarbe und Farbcode					
Sebring White	NAC	Emerald	HAC	Navy Blue Check	RAH
Black	PAA	Red & Black	RAA	Golden Tan Check	RAG
Beige	AAA	Green & Black	RAB	Off White	NAE
Chestnut	AAD	Navy Blue	JAJ	Grey	LAG
Tartan Red	CAC	Golden Tan	AAM		

Farben der Innenausstattung sind durch die vorstehenden Buchstaben kodiert. Nur der erste und der dritte Codebuchstabe folgt der Teilnummer, z.B. XYZ123JJ (Navy Blue)

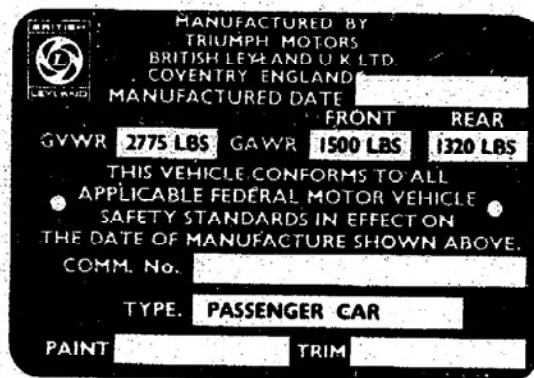 
Farben der Lackierung und Innenausstattung sind auf dem Typenschild angeführt.



SYMBOLS

- Right Hand Steering
- Left Hand Steering
- Right Hand
- Left Hand
- Safety Item
- Exhaust Emission
- Not Exhaust Emission

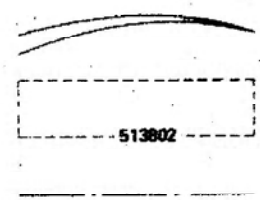 - Denotes parts fitted up to serial number(s) shown below.
- Indicates parts fitted from a serial number(s) up to another serial number(s).
- Denotes parts fitted from a serial number(s) onwards.
- Refer to note at foot of page.
- Refers to associated page or indicates part or assembly to which item connects.



Represents location of details.

Encloses parts which form an assembly or kit.

Indicates connecting items when these are not illustrated in their true relationship.

STANDARD ABBREVIATIONS

- 1st } On or adjacent to gears
- 2nd }
- 3rd }
- 4th }
- 5th }
- A/C Air Conditioning
- A/R As required.
- Assy. Assembly
- Auto. Automatic Gearbox
- Carb. Carburettor models
- CKD Completely knocked down
- C/R Compression ratio
- g Grammes
- LWB Long Wheel Base models
- NLS. No Longer Serviced.
- NSS Not Supplied Separately.
- O/D Overdrive
- PAS Power Assisted Steering
- Pelnj. Petrol injection models
- S/D Order on Service Division
- SOO Special Order
- SS Selected Sizes
- SWB Short Wheel Base Models
- 12.75" Lengths in inches

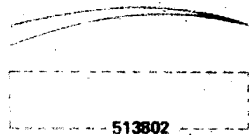 
COUNTRY ABBREVIATIONS

- A Austria
- AUS Australia
- B Belgium
- CDN Canada
- CH Switzerland
- CI Ivory Coast
- D Germany
- DK Denmark
- DZ Algeria
- E Spain
- EEC Common Market Countries
- F France
- GB United Kingdom
- I Italy
- J Japan
- L Luxembourg
- MA Morocco
- N Norway
- NZ New Zealand
- P Portugal
- S Sweden
- SF Finland
- SN Senegal
- TN Tunisia
- USA United States of America
- VN Vietnam

1B05

SYMBOLES

- Conduite à droite
- Conduite à gauche
- Droit
- Gauche
- Pièce de sécurité
- Anti-pollution gaz d'échappement
- Pas anti-pollution gaz d'échappement
- Pièces montées jusqu'aux numéros de série ci-dessous
- Pièces montées d'un de numéro(s) de série à un autre/d'autres numéros (s) de série
- Pièces montées à partir d'un/de numéros (s) de série
- Voir note au bas de la page
- Voir autre page, ou indique une pièce ou ensemble sur laquelle/lequel la pièce, en question est branchée




Indique l'emplacement des détails

Encadre les pièces formant un ensemble ou kit

Indique des pièces reliées entre elles si l'illustration n'indique pas leur vrai rapport

SYMBOLE

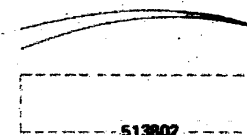 - Lenkung rechts
- Lenkung links
- Rechts
- Links
- Sicherheitsteil
- Abgase
- Nichtabgase
- Weist auf Teile hin, die bis Seriennummer(n) - siehe unten - montiert werden.
- Weist auf Teile hin, die von einer Seriennummer bis zu einer anderen Seriennummer montiert werden.
- Weist auf Teile hin, die von einer Seriennummer an montiert werden.
- Weist auf Fußnote hin.
- Weist auf eine damit zusammenhängende Seite hin oder zeigt Bauteile oder Einheiten, mit denen diese Bauteil verbunden ist.



Weist auf Stelle mit Details hin.

Zeigt Teile, die zu einer kompletten Einheit oder einem gesamten Bausatz gehören.

Zeigt Verbindungsteile, die hier nicht in ihrer korrekten Anordnung gezeigt werden.

ABBREVIATIONS STANDARD

- 1st } Sur les engrenages ou à côté
- 2nd }
- 3rd }
- 4th }
- 5th }
- A/C Climatisation
- A/R Selon besoins
- Assy Ensemble
- Auto Boîte de vitesses automatique
- Carb Modèles à carburateur
- CKD Complètement démonté
- C/R Taxu de compression
- g Grammes
- LWB Empattement long
- NLS Ne se fait plus
- NSS Non fournie séparément
- O/D Surmultiplication
- PAS Direction assistée
- PeInj Injection d'essence
- S/D Commander auprès Division Service
- SOO Commande spéciale
- SS Tailles spéciales
- SWB Empattement court
- 12.75" Longueurs en pouces

ABBREVIATIONS DES PAYS

- A Autriche
- AUS Australie
- B Belgique
- CDN Canada
- CH Suisse
- CI Côte d'Ivoire
- D Allemagne
- DK Danemark
- DZ Algérie
- E Espagne
- EEC Pays du Marché Commun
- F France
- GB Royaume-Uni
- I Italie
- J Japon
- L Luxembourg
- MA Maroc
- N Norvège
- NZ Nouvelle-Zélande
- P Portugal
- S Suède
- SF Finlande
- SN Sénégal
- TN Tunisie
- USA Etats-Unis d'Amérique
- VN Vietnam

STANDARDMASSIGE ABKÜRZUNGEN

- 1st } An oder in der Nähe von Gängen
- 2nd }
- 3rd }
- 4th }
- 5th }
- A/C Klimaanlage
- A/R Wie erforderlich
- Assy. Komplette Einheit
- Auto. Automatisches Getriebe
- Carb. Vergasermodelle
- CKD Vollkommen zerlegt
- C/R Verdichtungsverhältnis
- g Gramm
- LWB Modelle mit großem Achsabstand
- NLS Nicht mehr im Service
- NSS Nicht getrennt lieferbar
- O/D Overdrive
- PAS Servolenkung
- PeInj Modelle mit Benzineinspritzung
- S/D Auftrag/Service Division
- SOO Spezialauftrag
- SS Ausgewählte Größen
- SWB Modelle mit kurzem Achsabstand
- 12.75" Länge in Zoll


LANDERABKÜRZUNGEN

- A Österreich
- AUS Australien
- B Belgien
- CDN Kanada
- CH Schweiz
- CI Elfenbeinküste
- D Deutschland
- DK Danemark
- DZ Algerien
- E Spanien
- EEC EG-Länder
- F Frankreich
- GB Großbritannien
- I Italien
- J Japan
- L Luxemburg
- MA Marokko
- N Norwegen
- NZ Neuseeland
- P Portugal
- S Schweden
- SF Finnland
- SN Senegal
- TN Tunesien
- USA USA
- VN Vietnam

1B06

VEHICLE AND SERIAL COMMENCING NUMBERS. VOGNS OG AGGREGATS SERIENUMMER BEGYNDENDE MED NUMMER. AANVANGS SERIENUMMERS VAN CHASSIS EN ONDERDELEN. AUTON JA LAITTEEN ENSIMMAISET SARJANUMEROT. SERIE VEHICULE ET ORGANE NUMEROS DE DEBUT. SERIENANFANGSNUMMERN DER FAHRZEUGE UND EINHEITEN. NUMERI D'INIZIO SERIE VETTURE E GRUPPI. NUMEROS PRINCIPANTES DE VEICULOS E DE UNIDADES. NUMEROS INICIALES DE SERIE DE VEHICULO Y DE UNIDAD. BORJAN AV VAGENS OCH ENHETENS SERIENUMMER.

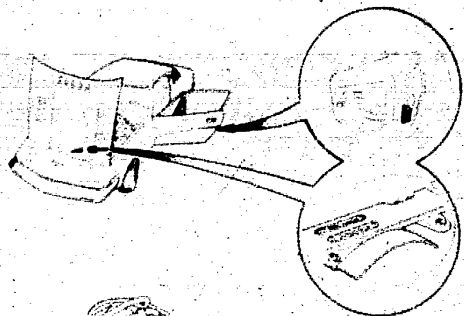 
TR8



ACN1

TICK

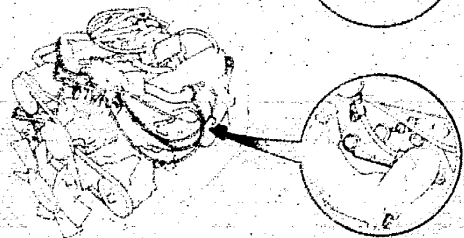 TCK



10E00001A (Fed Manual)

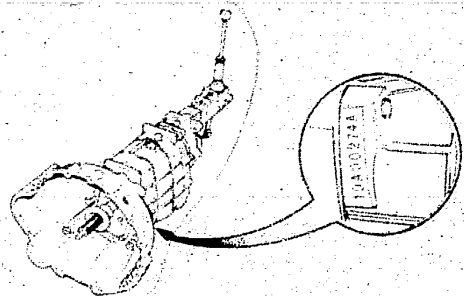 
11E00001A (Fed Auto)

12E00001A (Calif Manual)


13E00001A (Calif Auto)

14E00001A (P.I. Manual)

15E00001A (P.I. Auto)



15A00001A (Manual)
051N (Auto)

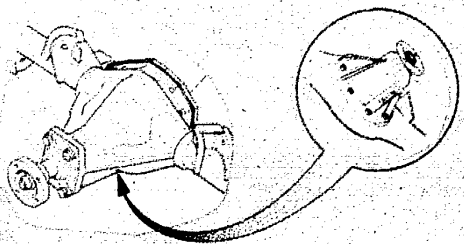 

CK1

VEHICLE IDENTIFICATION NUMBERING

1980 Model year onwards commences at VIN 200001 with an 8 digit prefix. Listed below are the codes with explanatory notes regarding Canley built vehicles.









TPVEV4AT	Coupe LHS automatic transmission N.A.S.
TPVEV8AT	Coupe LHS manual transmission N.A.S.
TPZEV4AT	Coupe LHS automatic transmission California.
TPZEV8AT	Coupe LHS manual transmission California.
TPLEV4AT	Coupe LHS automatic transmission Canada.
TPLEV8AT	Coupe LHS manual transmission Canada.
TPVDV4AT	Convertible LHS automatic transmission N.A.S.
TPVDV8AT	Convertible LHS manual transmission N.A.S.
TPZDV4AT	Convertible LHS automatic transmission California
TPZDV8AT	Convertible LHS automatic transmission California
TPLDV4AT	Convertible LHS automatic transmission Canada
TPLDV8AT	Convertible LHS manual transmission Canada









Solihull built vehicles commence at VIN 400001 and have the same 8 digit prefix code as shown above except that the 8th letter will be "A" instead of "T".

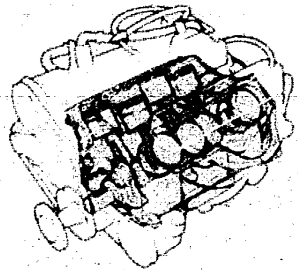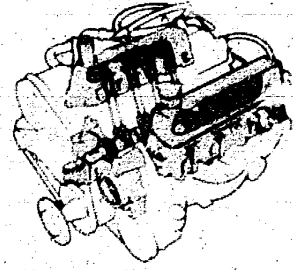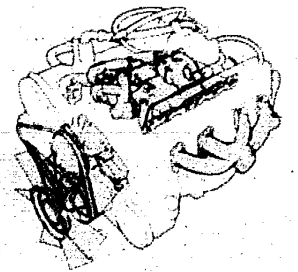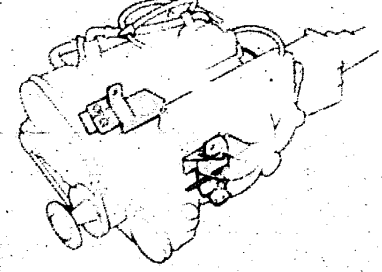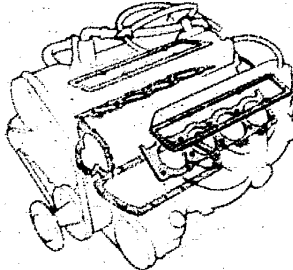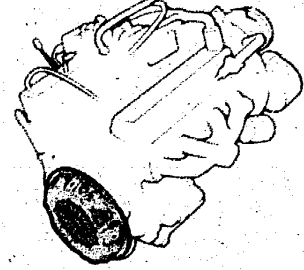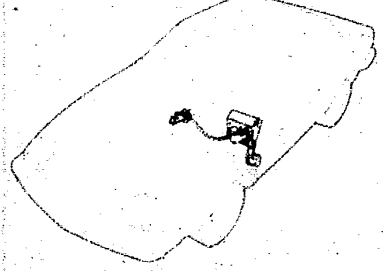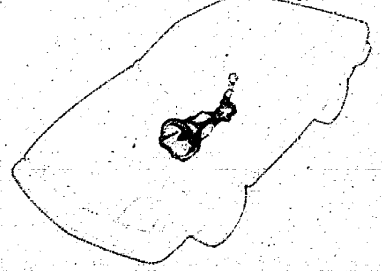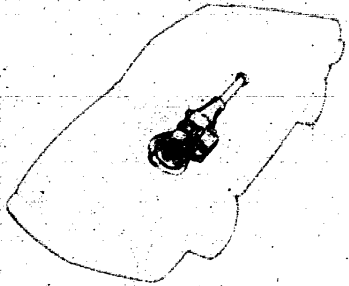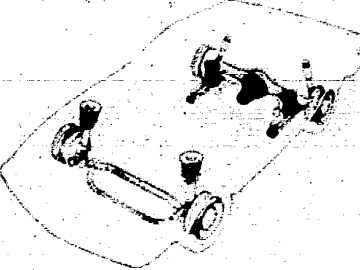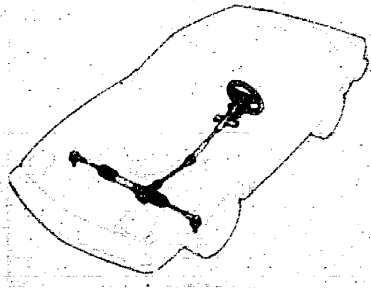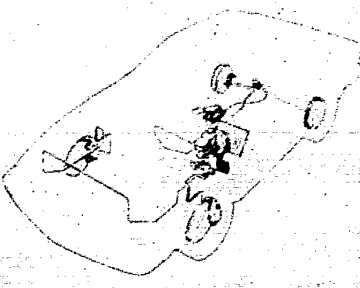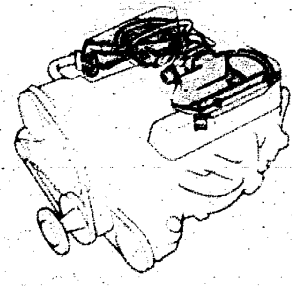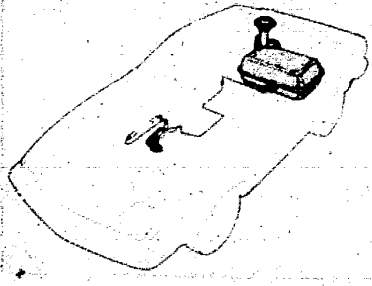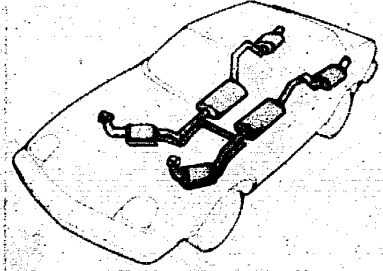               1B07

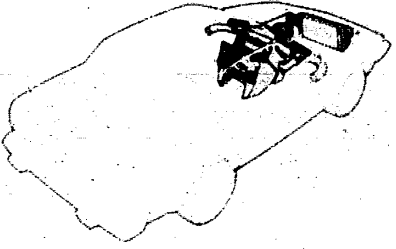 
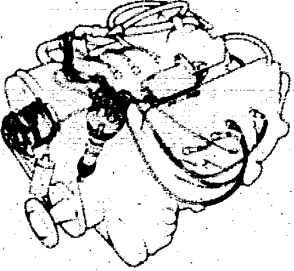 
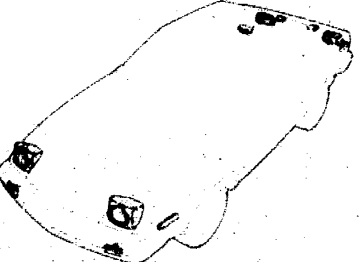 

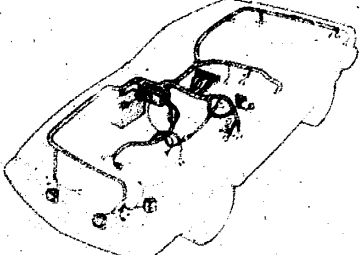 
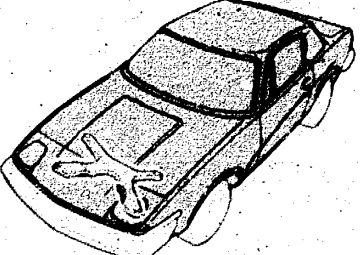 
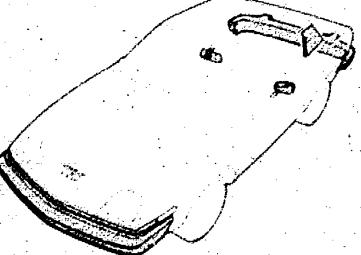 
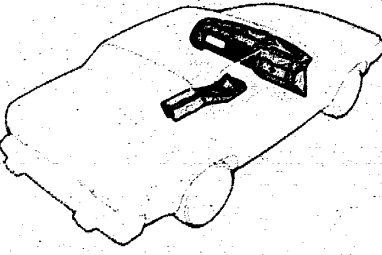 
PICTORIAL INDEX, TABLE DES MATIÈRES ILLUSTRÉES, VERZEICHNIS DER ABILDUNGEN.




PICTORIAL INDEX, TABLE DES MATIÈRES ILLUSTRÉES, VERZEICHNIS DER ABILDUNGEN.

	1C 02 to 1C 05		1C 06 to 1C 07
	1C 07 to 1C 09		1C 09
	1C 10		1D 02
	1D 03 to 1D 04		1E 02 to 1E 06

	1E 07 to 1E 15		1F 02 to 1F 06
	1G 02 to 1G 06		1H 02 to 1H 06
	1I 02 to 1I 04		1I 05 to 1I 06
	1I 14 to 1I 17		1J 02 to 1J 07

1B08

 <p>1K 02 to 1K 08</p>	 <p>1L 02 to 1L 05</p>
 <p>1L 06 to 1L 09</p>	 <p>1L 09 to 1L 13</p>
 <p>1L 14 to 1M 05</p>	 <p>2C 02 to 2C 09</p>
 <p>2C 10 to 2C 14</p>	 <p>2D 02 to 2D 04</p>

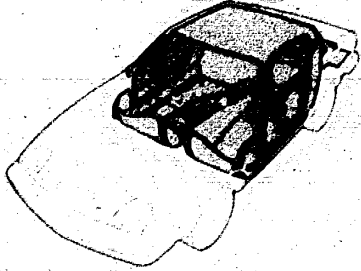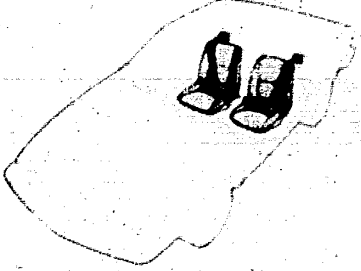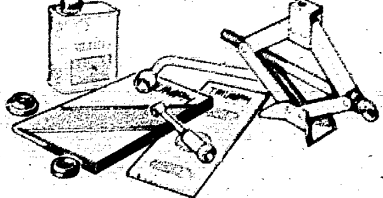    <p>2D 05 to 2D 11</p>	 <p>2D 11 to 2D 15</p>
 <p>2E 02 to 2E 04</p>	

KEY BLANK CROSS REFERENCE CHART

KEY SERIES	CODES	LOCK MANUFACTURER	KEY BLANK PART No.
CONVENTIONAL KEYS:			
BC	301 - 360	LOWE & FLETCHER	CZK 3438
FK	876 - 955	WILMOT BREEDEN	17H 2475
FP	626 - 750	WILMOT BREEDEN	AKA 463
FR	751 - 875	WILMOT BREEDEN	37H 7189
FS	001 - 099, 876 - 955	WILMOT BREEDEN	17H 2475
FT	101 - 225, 301 - 360	WILMOT BREEDEN	CZK 3438
TS	300 - 369	STREBOR	37H 4557
NP	0001 - 1000	NEIMAN	BAU 1849
STEERING LOCK TYPE KEYS:			
B	001 - 1000	BRITAX	37H 7194
B	001 - 1000	BRITAX	37H 7195*
BL RO VV VL	1001N - 2000N	LOWE & FLETCHER	AAU 8276
BP	001 - 1000	BRITAX	37H 7194
BP	001 - 1000	BRITAX	37H 7195*
D	1 - 64	BRITAX	RTC 817B
FH (LONG TIP)	1 - 3948	WASO	37H 7192
FH	1 - 3948	WASO	37H 7193
FR	1 - 1080	WASO	37H 7193
L & F	17001 - 18000	BRITAX	37H 7197
L & F	86001 - 88000	BRITAX	37H 7197
LR	001 - 1000	BRITAX	37H 7194
LR	001 - 1000	BRITAX	37H 7195*
NH	2001 - 3000	WILMOT BREEDEN	37H 6108
NJ	001 - 1500	WILMOT BREEDEN	37H 1494
TJ	3001 - 4000	C. E. MARSHALL	37H 8689
A	11225 - 53332	MAGNETEX	27H 9391
NO SERIES LETTER	2001 - 3000	NEIMAN	37H 7190
NO SERIES LETTER	7001 - 9000	NEIMAN	AAU 1888
NO SERIES LETTER	7001 - 9000	NEIMAN	BAU 1921
(Collapsible Head)			
*PRE CUT No. 3 DEPTH FIRST CUT BLANK.			

ALPHABETICAL INDEX

Description	Page No	Description	Page No
'A'		'B' - continued	
'A' Post Panel	2C 05	Body Shell Assembly	2C 02
'A' Post Trim Panel	2D 05	Body Side Mouldings	2C 13
'A' Post Ventilator	2D 05	Bonnet	2C 03
Accelerator Cable and Pedal	1I 04	Bonnet Catch	2C 04
Accelerator Linkage	1I 04	Bonnet Hinge	2C 03
Aerial	1K 16	Bonnet Release Cable	2C 04
Aerial Support Bracket	2C 10	Bonnet Seal	2C 03
Air Cleaner Assembly	1I 02	Bonnet Stay Rod	2C 03
Air Conditioning Assembly	1J 03	Bottle-Radiator Overflow	1J 02
Air Conditioning Compressor	1J 03	Bottle-Windscreen Washer	1K 09
'Air Conditioning Hose	1J 06	Brake Assembly-Rear	1H 02
Air Injection Relief Valve	1I 13	Brake Caliper-Front	1H 02
Air Intake Adaptor	1I 02	Brake Disc-Front	1H 02
Air Intake Hose	1I 11	Brake Hand	1H 06
Air Temperature Control Unit	1I 11	Brake-Hose(Front)	1H 05
Air Manifold and Check Valve	1I 13	Brake-Hose (Rear)	1H 05
Air Pump and Belt	1I 12	Brake Master Cylinder	1H 06
Alternator Assembly (17 ACR)	1K 03	Brake Pedal	1H 04
Alternator Assembly (25 ACR)	1K 04	Brake Shoes	1H 02
Alternator Mtg	1K 03	Bumper-Front	2C 12
Anti-roll Bar (Front)	1F 02	Bumper-Rear	2C 13
Anti-roll Bar (Rear)	1F 05		
Arm-Windscreen Wiper	1K 08		
Armrest-Front Door	2D 05		
Ash Tray	2D 05		
Automatic Gearbox Unit	1E 07		
Axle Assembly Rear	1F 03		
Axle Shaft	1F 04		
		'C'	
'B'		Cable-Acceleration	1E 04
'B' Post Panel	2C 10	Cable-Handbrake	1H 07
'B' Post Striker	2C 09	Cable-Bonnet Release	2C 04
Backlight Glass	2C 11	Cable-Speedometer	1K 10
Balance Weights, Road Wheels	1F 06	Cable-Kickdown	1E 08
Ball Joint Assembly, Steering	1E 02	Caliper-Front Brake	1H 02
Ball Joint, Front Suspension	1F 02	Camshaft and Chainwheel	1C 05
Battery	1K 15	Canister-Carbon	1I 13
Battery Leads	1K 15	Cantrail Assembly	2C 05
Bearing-Conn Rod	1C 04	Cap-Fuel Filler	1I 06
Bearing-Clutch	1B 03	Cap-Oil Filler	1C 06
Bearing-Constant Pinion	1E 03	Cap-Windscreen Washer Bottle	1K 09
Bearing-Front Hub	1F 02	Carburettor Assembly	1I 03
Bearing-Layshaft	1E 05	Carburettor Linkage	1I 04
Bearing-Main	1C 03	Carpet-Front Floor	2D 13
Bearing-Rear Axle Hub	1F 04	Carpet-Gearbox	2D 13
Belt-Air Pump	1I 12	Carpet-Rear Floor	2D 13
Belt-Compressor	1J 03	Carpet-Sill	2D 13
Belt-Fan	1C 07	Cartbridge Strut	1F 04
Belt-Steering Pump	1G 05	Centre Console	2D 04
Blade Windscreen Wiper	1K 08	Centre Console Knee Pads	2D 15
Body Harness	1K 13	Chain Timing	1C 05
		Check Valve (Air Manifold)	1I 13
		Cigar Lighter	1K 11
		Clack	1K 11
		Clutch Cover and Driven Plate	1D 02

1B10

ALPHABETICAL INDEX CONTINUED

Description	Page No	Description	Page No
'C' - continued		'D' - continued	
Clutch Housing	1D 03	Driven Gear (Manual Gearbox)	1E 05
Clutch Master Cylinder	1D 04	Driven Plate (Clutch)	1D 02
Clutch Operation Lever	1D 03	Drivers Footrest	2C 13
Clutch Pedal	1D 03	Driving Gear (Auto Gearbox)	1E 11
Clutch Slave Cylinder	1D 04	Driving Gear (Manual Gearbox)	1E 04
Clutch Throwout Sleeve	1D 03		
Coil-Ignition	1K 02	'E'	
Column Steering	1G 02	E.S.R. Valve	1I 12
Compressor Driving Belt	1J 02	Engine Breathing	1I 11
Compressor Mtg.	1J 02	Engine Harness	1K 13
Condenser-Air Conditioning	1J 03	Engine Mfg. (Front)	1C 09
Condenser-Distributor	1K 02	Engine-Short	1C 02
Controls Knobs (Air Conditioning)	1J 06	Evaporative Loss Pipes	1I 13
Controls Knobs (Heater)	1J 05	Exhaust Front Pipes	1I 08
Connecting Rod and Bearings	1C 04	Exhaust Manifold	1C 09
Cover-Clutch	1D 02	Exhaust Silencer	1I 10
Cover-Rocker Shaft	1C 06	Exhaust Tailpipe	1I 10
Cover-Timing	1C 07	Extension Lead Door Speaker	2D 06
Crankshaft	1C 03	Extension Lead Heated Backlight	1K 13
Crankshaft Damper and Pulley	1C 03	Extension Lead Number Plate Lamp	1K 13
Crossmember-Front Suspension	2C 02	Exterior Mirror	2C 12
Crown Wheel and Pinion	1F 04		
Cylinder Head and Gasket	1C 05	'F'	
		Facia Centre Ventilator	2D 03
'D'		Facia Console	2D 02
Damper-Front Suspension	1F 03	Facia End Ventilator	2D 03
Damper-Rear Suspension	1F 05	Facia Harness	1K 13
Dash Insulation Pad	2D 15	Facia Moulding	2D 03
Dash Panel Assembly	2C 05	Facia Top Pad	2D 02
Dash Side Trim Panel	2D 05	Facia Upper Roll	2D 03
Decarbonising Gasket Kit	1C 09	Fan-Air Conditioning	1J 03
Demister Ducts (Air Conditioning)	1J 06	Fan Belt	1C 07
Demister Ducts (Heater)	1J 04	Fan-Cooling	1C 07
Demister Duct Mesh	2D 02	Fan Motor (Air Conditioning)	1J 03
Differential Gears	1F 04	Fan Pulley	1C 07
Dipstick (Auto Gearbox)	1E 07	Filler Cap (Fuel)	1I 06
Disc Brake Front	1H 02	Filler Cap (Oil)	1I 06
Distributor Assembly	1K 02	Filter-Oil Pump	1C 04
Distributor Drive Gear	1C 05	Flasher Unit	1K 12
Distributor Leads	1K 02	Flexible Joint-Steering	1G 02
Door Aperture Seal	2D 05	Flywheel	1D 02
Door Armrest	2D 05	Footrest-Drivers	2C 09
Door Assembly	2C 07	Fork-Selector	1E 04
Door Buffer	2C 07	Frontal Grille	2C 13
Door Glass	2C 07	Front Bumper	2C 12
Door Handles	2C 03	Front End Panel	2C 03
Door Lock	2C 09	Front Floor Carpet	2D 13
Door Sill Button	2C 09	Front Panel	2C 03
Door Speaker and Grille	2C 09	Front Panel Badge	2C 14
Door Speaker Leads	2D 06	Front Side and Flasher Lamps	1K 06
Door Tread Plates	2D 05	Front Spoiler	2C 14
Drip Channel Moulding	2C 13	Front Suspension Ball Joint	1F 02
Driven Gear (Auto Gearbox)	1E 13		

ALPHABETICAL INDEX CONTINUED

Description	Page No	Description	Page No
'E' - continued		'F' - continued	
Front Suspension Damper	1F 03	Front Suspension Spring	1F 03
Front Suspension Spring	1F 03	Front Suspension Tie Rod	1F 02
Front Suspension Tie Rod	1F 02	Front Wing	2C 03
Front Wing	2C 03	Fuel Filler Cap	1I 06
Fuel Filler Cap	1I 06	Fuel Filler Hose	1I 06
Fuel Filler Hose	1I 06	Fuel Filler Pipe	1I 06
Fuel Filler Pipe	1I 06	Fuel Gauge (Facia)	1K 10
Fuel Gauge (Facia)	1K 10	Fuel Pipes	1I 05
Fuel Pipes	1I 05	Fuel Pump	1I 06
Fuel Pump	1I 06	Fuel Tank Assembly	1I 06
Fuel Tank Assembly	1I 06	Fuel Tank Unit	1I 06
Fuel Tank Unit	1I 06	Fuse Box Cover	2D 02
Fuse Box Cover	2D 02		
'G'		'G'	
Gasket-Air Cleaner	1I 02	Gasket-Air Cleaner	1I 02
Gasket-Carburettor	1I 02	Gasket-Carburettor	1I 02
Gasket-Cylinder Head	1C 05	Gasket-Cylinder Head	1C 05
Gasket-Decarbonising Set	1C 09	Gasket-Decarbonising Set	1C 09
Gasket-Engine Set	1C 09	Gasket-Engine Set	1C 09
Gasket-Exhaust Pipe	1I 08	Gasket-Exhaust Pipe	1I 08
Gasket-Manifold (Exhaust)	1C 09	Gasket-Manifold (Exhaust)	1C 09
Gasket-Manifold (Inlet)	1C 08	Gasket-Manifold (Inlet)	1C 08
Gasket-Rocker Cover	1C 06	Gasket-Rocker Cover	1C 06
Gasket-Sump	1C 02	Gasket-Sump	1C 02
Gasket-Thermostat	1C 08	Gasket-Thermostat	1C 08
Gasket-Timing Cover	1C 07	Gasket-Timing Cover	1C 07
Gasket-Water Pump	1C 07	Gasket-Water Pump	1C 07
Gear-1st Speed	1E 04	Gear-1st Speed	1E 04
Gear-2nd Speed	1E 04	Gear-2nd Speed	1E 04
Gear-3rd Speed	1E 03	Gear-3rd Speed	1E 03
Gear-5th Speed	1E 05	Gear-5th Speed	1E 05
Gear-Layshaft	1E 05	Gear-Layshaft	1E 05
Gear-Reverse	1E 05	Gear-Reverse	1E 05
Gearbox Assembly (Automatic)	1E 07	Gearbox Assembly (Automatic)	1E 07
Gearbox Assembly (Manual)	1E 02	Gearbox Assembly (Manual)	1E 02
Gearbox Carpet	2D 13	Gearbox Carpet	2D 13
Gearbox Handlever	1E 06	Gearbox Handlever	1E 06
Gearbox Mainshaft	1E 03	Gearbox Mainshaft	1E 03
Gearbox Mounting	1E 15	Gearbox Mounting	1E 15
Gearlever Assembly	1E 06	Gearlever Assembly	1E 06
Gear Selector (Auto Gearbox)	1E 14	Gear Selector (Auto Gearbox)	1E 14
Glass-Backlight	2C 11	Glass-Backlight	2C 11
Glass-Front Door	2C 07	Glass-Front Door	2C 07
Glass-Windscreen	2C 11	Glass-Windscreen	2C 11
Glazing Kit-Windscreen		Glazing Kit-Windscreen	
Glovebox and Lock	2D 03	Glovebox and Lock	2D 03
Grille-Frontal	2C 13	Grille-Frontal	2C 13
Grille-Speaker (Door)	2D 06	Grille-Speaker (Door)	2D 06
Handbrake Assembly	1H 06	Handbrake Assembly	1H 06
Handbrake Cable	1H 06	Handbrake Cable	1H 06
Handbrake Compensator Link	1H 06	Handbrake Compensator Link	1H 06
		'H' - continued	
		Handbrake Gauntlet	2D 11
		Handle-Door	2C 09
		Handle-Sunshine Roof	2C 09
		Harness-Body	1K 13
		Harness-Main	1K 13
		Harness-Safety	2D 13
		Hazard Warning Switch	1K 11
		Headlamp Actuator Motor	1K 06
		Headlamp Assembly	1K 05
		Headlamp Bezel Panel	1K 05
		Headlamp Box	2C 03
		Headlamp Hinge	1K 06
		Headlight Switch	1K 11
		Headlining	2D 08
		Head Restraint	2D 11
		Heater Assembly	1J 04
		Heater Hoses	1J 04
		Hinge-Bonnet	2C 03
		Hinge-Front Door	2C 07
		Hinge-Trunk Lid	2C 11
		Horns	1K 12
		Hose-Water Manifold	1J 04
		Hose-Water	1J 04
		Hub Front Suspension	1F 02
		Hydraulic Pipes Front	1H 05
		Hydraulic Pipes Rear	1H 06
		'I'	
		Idler Pulley	1J 03
		Ignition Coil	1K 02
		Ignition Switch	1K 11
		Inhibitor Switch (Auto Gearbox)	1E 08
		Inlet Manifold	1C 08
		Inlet Valve	1C 05
		Instrument Panel	1K 10
		Insulation Pads	2D 15
		Interior Mirror	2C 12
		'J'	
		Jack Lifting	2E 02
		Jack Mtg. Bracket	2C 09
		'K'	
		Kickdown Cable	1E 08
		Knee Pads Centre Console	2C 13

1B11

ALPHABETICAL INDEX CONTINUED

Description	Page No	Description	Page No
'C' - continued		'I' - continued	
Steering Wheel	1G 02	Trunk Floor Mat	2D 14
Stop Tail Lamp Rear	1K 07	Trunk Illumination Lamp	2D 14
Sump Oil	1C 02	Trunk Lid and Hinge	2C 11
Sun Gear (Auto Gearbox)	1E 11	Trunk Lid Lock	2C 11
Sun Visors	2D 07	Trunk Lid Transfer	2C 14
Sunshine Roof Assembly	2D 08	Trunk Lid Weatherseal	2C 11
Sunshine Roof Panel	2C 05		
Support Steering Column	1G 06	'J'	
Switch-Air Conditioning Cut Out	1K 11	Universal Joint Steering	1C 02
Switch-Courtesy Light	1K 12	Upper Facia Pill	2D 03
Switch-Flasher	1K 11	Upper Spring Pan	1F 03
Switch-Handbrake Warning	1K 12	Upper Steering Column	1G 02
Switch-Hazard	1K 11		
Switch-Headlamp Dip	1K 11	'K'	
Switch-Heated Backlight	1K 11	Valance-Front Fender	2C 03
Switch-Horn	1K 11	Valve Body (Auto Gearbox)	1E 12
Switch-Ignition	1K 11	Valve-Exhaust	1C 05
Switch-Inhibitor and Reverse	1E 08	Valve-Exhaust Gas Recirculation	1I 12
Switch-Master Lights	1K 11	Valve-Inlet	1C 05
Switch-Oil Pressure	1C 04	Valve-Oil Pressure Relief	1C 04
Switch-Pressure Cut in	1K 12	Valve-Servo Non Return	1C 08
Switch-Reverse Light	1E 06	Valve Springs and Collar	1C 05
Switch-Rheostat	1K 11	Valve-Thermo Control (Air Con)	1J 06
Switch-Seat Sensor	1K 12	Valve-Water (Aor Con.Units)	1J 06
Switch-Starter	1K 11	Ventilator-Facia	2D 03
Switch-Stop Lamp	1K 12		
Switch-Thermal Transmitter	1C 08	'L'	
Switch-Thermal (Air/Con)	1C 08	Washer Bottle, Windscreen	1K 09
Switch-Wiper/Washer	1K 11	Water Pump and Pulley	1C 07
		Wheelarch-Front	2C 04
'D'		Wheelarch-Rear	2C 10
Tachometer	1K 10	Wheel-Rear	1F 06
Tank-Petrol	1I 06	Wheel-Steering	1G 02
Tappets	1C 06	Windscreen Glass and Glazing Kit	2C 11
Temperature and Gauge	1K 10	Windscreen Surround Finishers	2C 11
Temperature and Transmitter	1C 08	Windscreen Washer Bottle	1K 09
Thermostat and Gasket	1C 08	Windscreen Washer Motor	1K 09
Tie Rod Lever	1F 02	Windscreen Wiper Details	1K 08
Timing Chain	1C 05	Windscreen Wiper Motor	1K 09
Timing Chain Wheel	1C 05	Window Regulator	2C 07
Timing Cover and Gasket	1C 07	Wing-Front	2C 03
Tonneau Side Panel	2C 10	Wing-Rear	2C 10
Tools	2E 02	Wiper Arms and Blades	1K 18
Touch-in Paint	2E 03	Wiper Link Set Assembly	1K 08
Torque Converter	1E 07		
Transfer-Front Panel	2C 14		
Transfer-Trunk Lid	2C 14		
Tread Plates Door	2C 13		
Trim Luggage Compartment	2D 14		
Trim Pads Front Door	2D 06		

BLANK

1B13