


Step by step guide to installing TWS LED Tail Light Kit in your Triumph TR7 or TR8. **Items needed:**

- LED Tail Light Kit https://www.thewedgeshopstore.com/led-tail-lights-tr7-tr8/
- New Tail Light Gaskets https://www.thewedgeshopstore.com/tail-light-gaskets/
- Hot Glue Gun https://www.amazon.com/gp/product/B07K798MK9

Step 1:

Take a picture of your existing light wiring setup for reference. Then remove all bulbs from the housing, keeping the wiring connected for reference.

Next remove all the nuts from the tail light housing. There are 6 on each tail light (4 shown below)

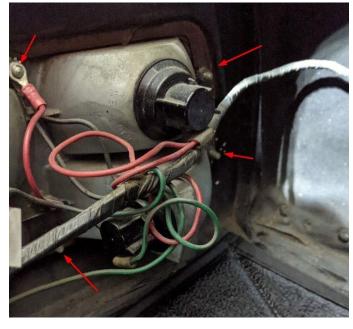




Step 2: With the housing out, take out the old tail light gaskets and clean away any debris.





Step 3 Carefully remove the tail light cover from the metal casing

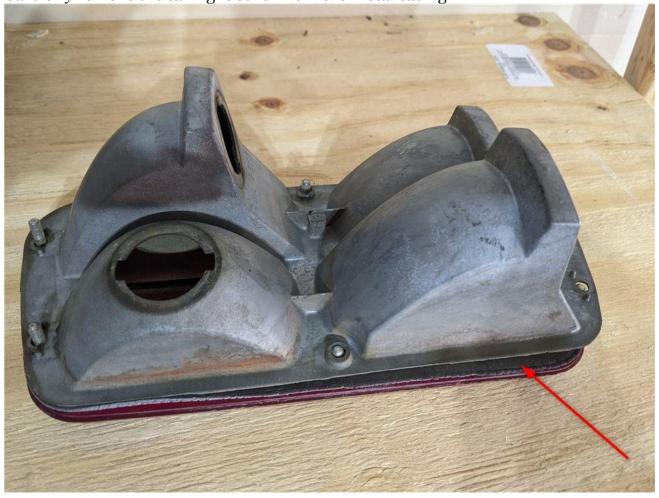



Step 4
Remove the old tail light gasket and set everything out to be cleaned/washed. Use soapy water and soft bristle tooth brush to clean everything up.





Step 5

Once all cleaned, place your LED lights in the housing, following the instructions for placement. Use a hot glue gun to secure the boards in place. Use a small bead on the corners and edges, as indicated with the arrows below.





Step 6

Put on your new tail light gaskets and begin to reinstall your tail lights. Connect the wiring as per the instructions. <u>OEM configuration (Option 1) is recommended.</u>
Instructions here

Use your center screws for your multi ground supplied cable.




Step 7:

Install your new flasher. The old flasher is mounted underneath the drivers side (US) dash, near the steering column. When looking at the flasher, with the middle tab on



the top, connect the green/purple wire to the right tab and the other wire to the left tab. Hook the black wire coming from the flasher to ground.

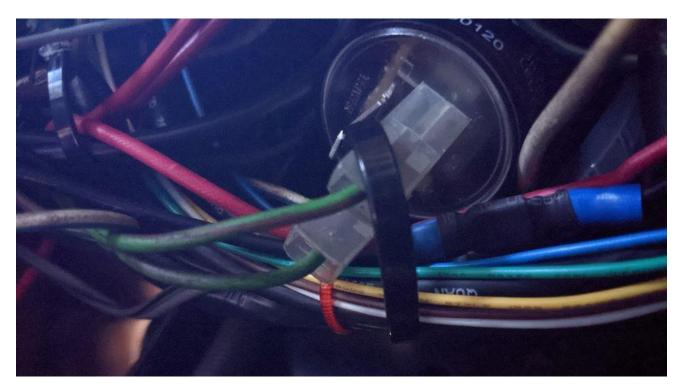



For the flasher, if you are installing these on a TR8, when looking at the flasher with the middle tab on the top, hook the green brown to the right prong and the green light pink to the left prong.